INSTRUCTIONS

COOLING-WATER SYSTEM

GE EXPORT LOCOMOTIVES

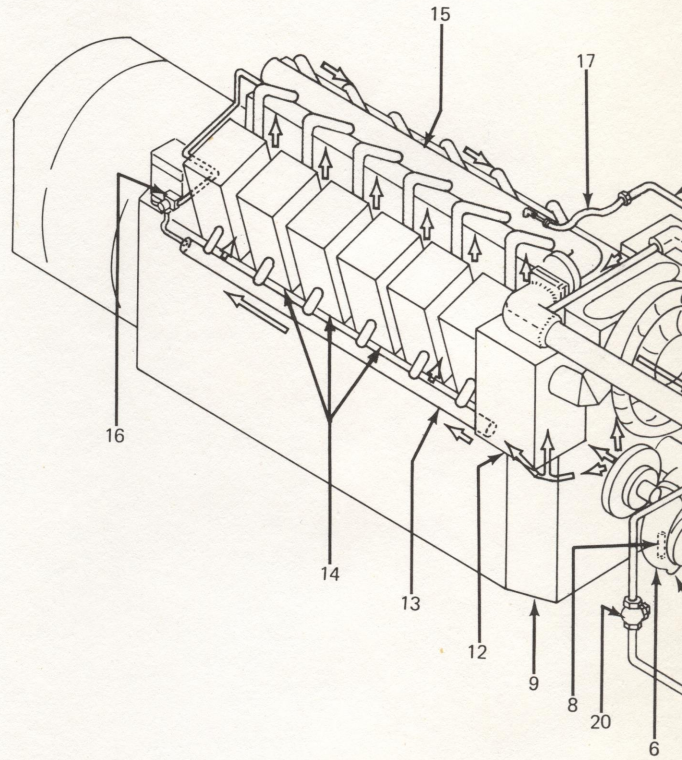

FIG. 1, E-25035

REF.	DESCRIPTION
1	EXPANSION TANK
2	FILL CAP
3	LEVEL GAGE
4	PRESSURE RELIEF MAGNET VALVE
5	PRESSURE RELIEF DRAIN PIPE
6	WATER PUMP
7	PUMP DRAIN PLUG
8	WATER-PUMP TELL-TALE HOLE
9	FORWARD END COVER
10	TURBOCHARGER
11	LEFT-BANK INTERCOOLER
12	RIGHT-BANK INTERCOOLER
13	WATER INLET HEADER, RIGHT SIDE
14	ENGINE CYLINDERS
15	WATER OUTLET HEADER
16	LOW WATER PRESSURE DEVICE (PART OF CONTROL GOVERNOR)
17	HOSE
18	ENGINE VENT LINE
19	SIDE WATER FILLS
20	CHECK VALVES
21	FLEXIBLE CONNECTION
22	RADIATOR AND SHUTTER
23	MANUAL SHUTTER CONTROL LEVER
24	AIR COMPRESSOR
25	LUBE-OIL COOLER
26	TEMPERATURE SWITCH (WT1)
27	TEMPERATURE SWITCH (WT2)
28	TEMPERATURE SWITCH (HITS)
29	TEMPERATURE SWITCH (HWTS)

(A) MAIN DRAIN VALVE

(T) TEST POINTS

These instructions do not purport to cover all details or variations in equipment nor to provide for every possible contingency to be met in connection with installation, operation or maintenance. Should further information be desired or should particular problems arise which are not covered sufficiently for the purchaser's purposes, the matter should be referred to the General Electric Company.

Verify numbers for parts, tools, or material by using the Renewal Parts or Tool Catalogs, or contact your General Electric representative for assistance. Do not order from this publication.

11-78 (750) WHT

GENERAL ELECTRIC

PRINTED IN U.S.A.
E

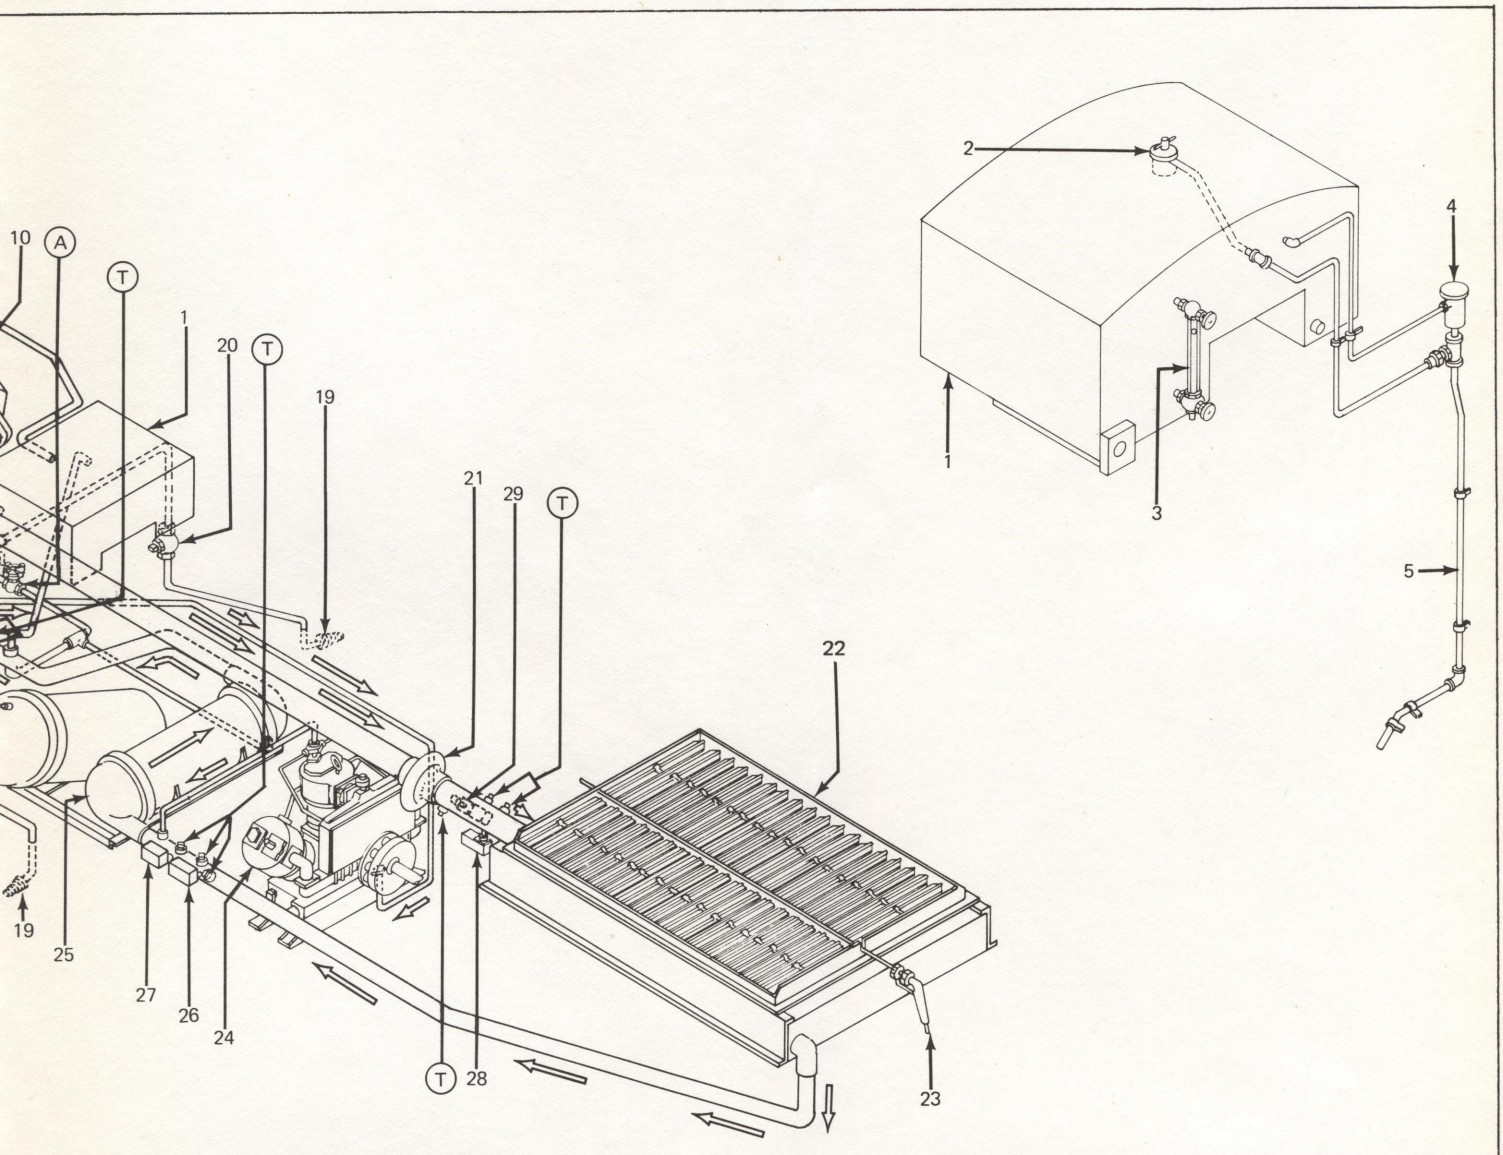

FIG. 1. TYPICAL COOLING-WATER SYSTEM FOR GE EXPORT TYPE DIESEL-ELECTRIC LOCOMOTIVES.